


TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

All Trilennium locks are handed for inswing applications when they are shipped. When being used on a outswing door, you must use the opposite hand lock and reverse the Panic Release feature.

Note:


Trilennium Locks can only be re-handed from right hand inswing to left hand reverse and from left hand inswing to right hand reverse.

HANDING

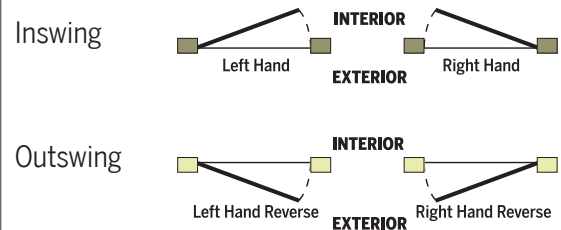

1. Part identification.

There is one component that creates the "panic release" feature on the interior of the Trilennium™ mortise lock. The long **drive arm** is for the interior, the short **drive arm** for the exterior.

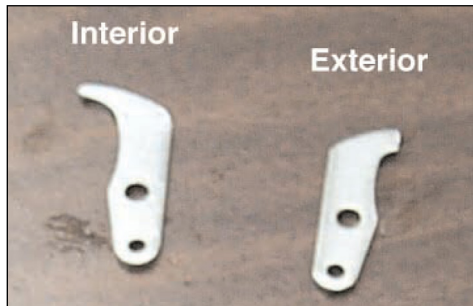


2a. Remove plastic covers

The black plastic "rehanding covers" are removable. Depress the snap lock using a fingernail and lift the cover out.



2b. Twist to remove.

One edge is under the white "I" beam, so twist it to the side slightly.

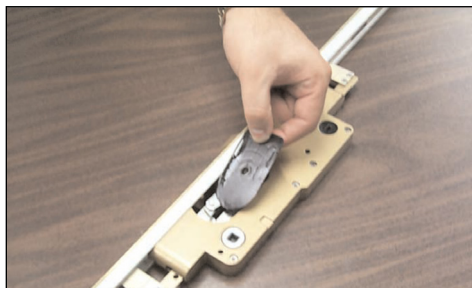

3. Reverse arms.

Once you have removed both plastic covers, reverse the drive arms. Reference 2nd page of correct placement. Reinstall the covers.



TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

DRIVE ARM POSITIONING REFERENCE


Interior Side

Unlocked Position



Exterior Side

Unlocked Position

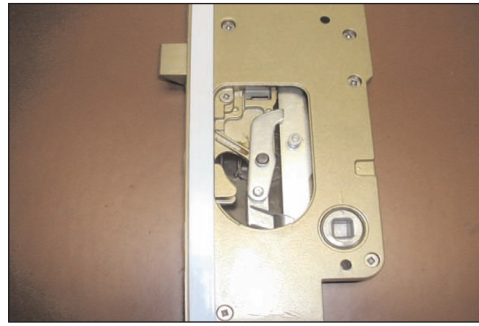

Interior Side

Locked Position



Exterior Side

Locked Position

