


## TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

All Trilennium locks are handed for inswing applications when they are shipped. When being used on a outswing door, you must use the opposite hand lock and reverse the Panic Release feature.

### ⚠ Note:


Trilennium Locks can only be re-handed from right hand inswing to left hand reverse and from left hand inswing to right hand reverse.

### HANDING

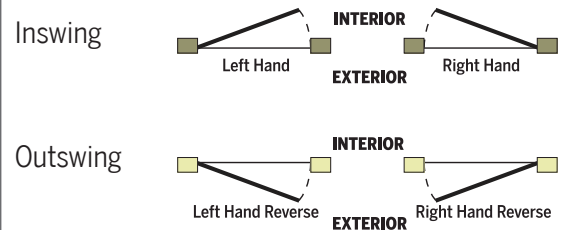

### 1. Part identification.

There is one component that creates the "panic release" feature on the interior of the Trilennium™ mortise lock. The long **drive arm** is for the interior, the short **drive arm** for the exterior.

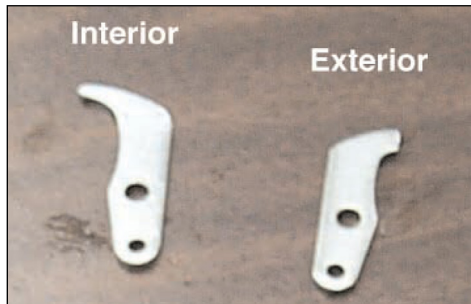


### 2a. Remove plastic covers

The black plastic "rehanding covers" are removable. Depress the snap lock using a fingernail and lift the cover out.



### 2b. Twist to remove.

One edge is under the white "I" beam, so twist it to the side slightly.

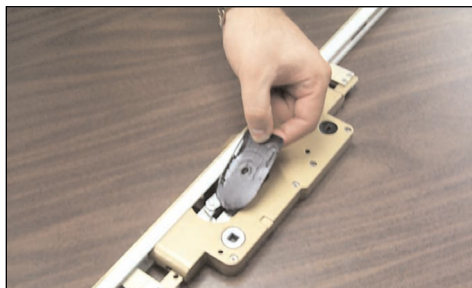

### 3. Reverse arms.

Once you have removed both plastic covers, reverse the drive arms. Reference 2nd page of correct placement. Reinstall the covers.



TRILENNIUM 3000/3070/3500 PANIC RELEASE REHANDING

DRIVE ARM POSITIONING REFERENCE


Interior Side

Unlocked Position



Exterior Side

Unlocked Position

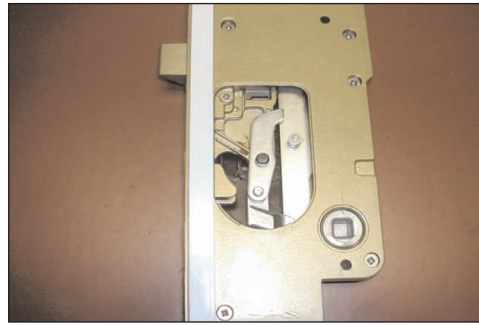

Interior Side

Locked Position



Exterior Side

Locked Position

